



## 2017 PNEUMATIC SPRINGS/AIR SPRINGS/AIR SHOCKS BULLETIN (6/27/17)

### SPRINGS:

1. ONLY coil springs or leaf springs will be permitted. No pneumatic springs, "air" springs, or "air" shocks permitted.

### SHOCKS:

Shock absorbers may not contain any "internal" spring that functions as a load bearing suspension spring, "internal" coil bump spring above or below the working piston, nor "internal" bump stop of any kind.

No pneumatic springs, "air" springs or "air" shocks" permitted.